
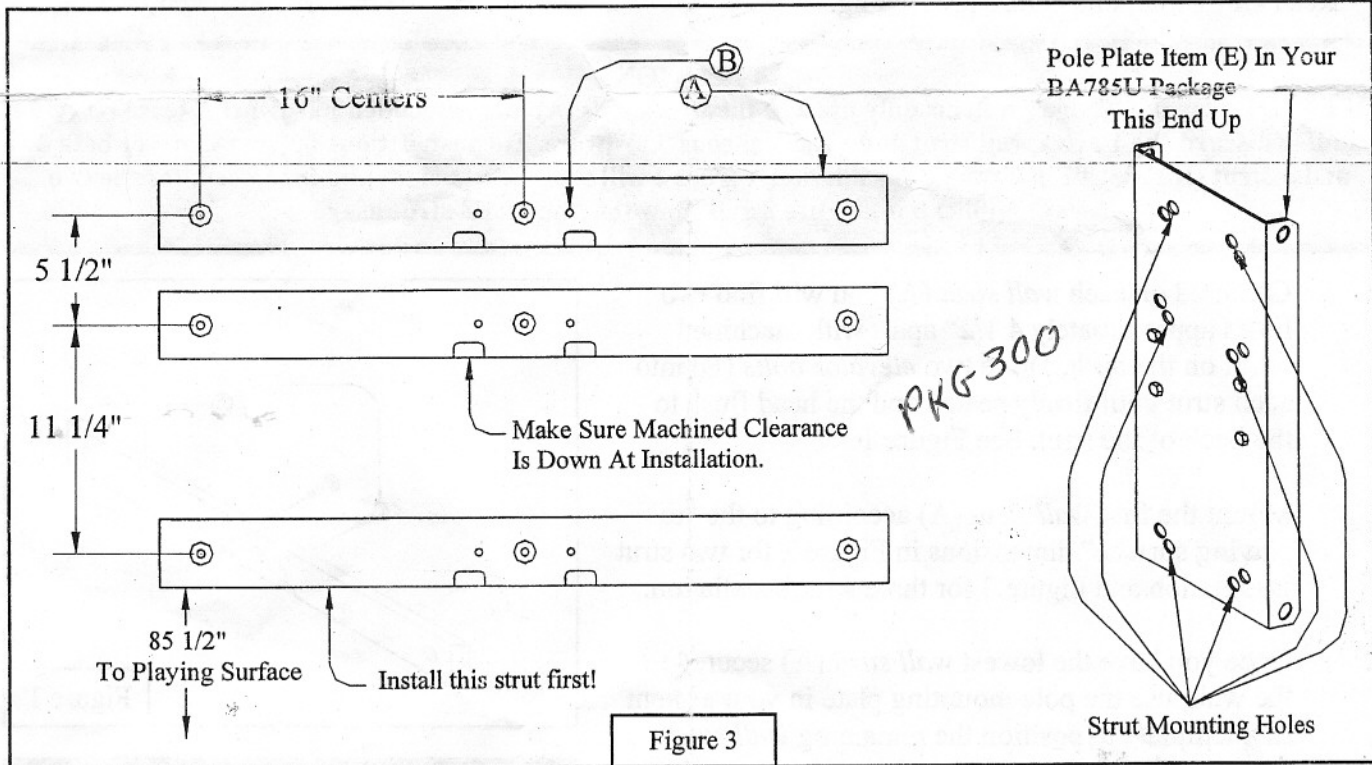


NOTICE!

Each wall strut (A) has 3 mounting holes pre-drilled on 16" centers, make sure to use at least 3 anchors per strut. If the hole positions interfere somehow the struts can easily be drilled for custom mounting. **REMEMBER** you must have struts securely fastened to the wall, please use adequate fasteners.

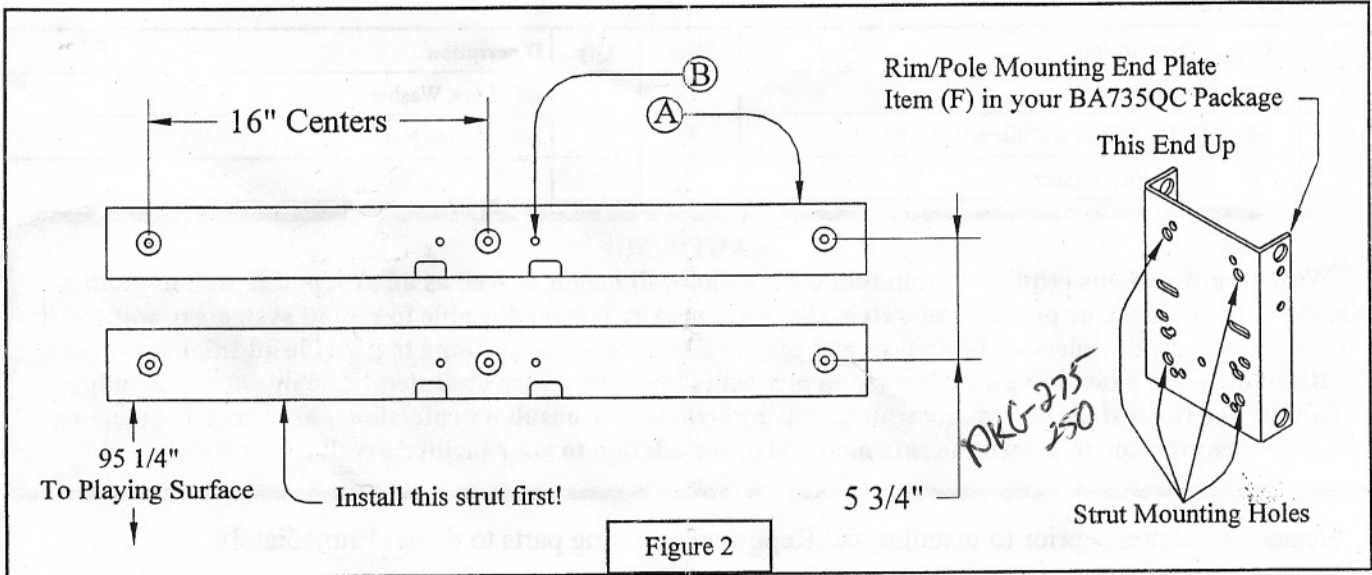

4. Assemble your extension arm according to the instructions provided.
5. Install extension arm assembly to wall struts (A) using 3/8" flat washers (C), 3/8" lock washers (D) and 3/8" hex nuts (E).
6. Mount backboard and goal according to the instructions provided (goal may require pre-assembly).